


# Valuable technical information

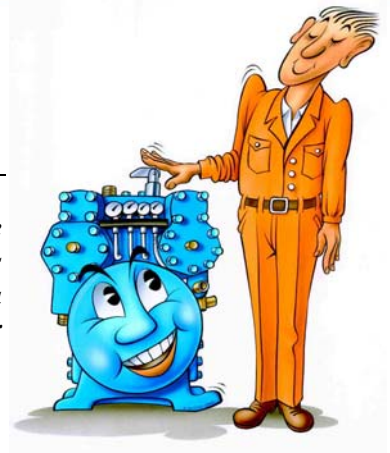

## SPARE-PART & MAINTENANCE KITS Model LL2/90

SPERRE's kits of genuine spare-parts include the wear parts you must change when you overhaul the compressor. For example, if you replace a valve, it is strongly recommended to replace the valve gaskets at the same time. With a spare-part kit available, all necessary parts are at hand together with clear installation instructions.



For model LL2/90 following kits are available:

| Description             | Part No | Content of kit  |
|-------------------------|---------|---|
| Gasket kit              | 4121    | All flat gaskets, O-rings, sealing rings, and valve gaskets.  |
| Crankshaft              | 1403MK  | Crankshaft with all bearings, flywheel key and nut, Seeger-rings, endplate and screw.   |
| Valve LP                | 3036MK  | Valves and necessary copper rings and/or gaskets.   |
| Overhaul kit - LP valve | 3036MK2 | Valve plate and gaskets.  |
| Piston LP               | 3356MK  | Piston, gudgeon pin with Seeger-rings and piston rings.   |
| Connecting rod          | 1424MK  | Connecting rod with small- and big-end bearings, oil scoop with set screw.  |
| Cylinder LP             | 1137MK  | Cylinder with gaskets, stud bolts/nuts and fittings.  |
| Overhaul kit Routine B  | 7928    | All parts needed for 5 000-hours' maintenance: Overhaul kits for valves complete with gaskets and guide rings, piston rings, connecting rod bearings, gudgeon pins, Seeger-rings, gaskets and ventilator. |
| Overhaul kit Routine C  | 7958    | All parts needed for 10 000-hours' maintenance: Same as kit B, plus complete valves, crankshaft bearings and seal ring.   |

Maintenance kits:

- All necessary parts at hand when you need them
- With clear installation instructions enclosed

**Genuine Sperre parts give you peace of mind at sea!**

**Sperre Industri AS**  
Tel +47 70 16 11 00  
Fax +47 70 16 11 10  
E-mail: [industri@sperre.com](mailto:industri@sperre.com)

**Sperre Rotterdam BV**  
Tel +31 180 463 299  
Fax +31 180 463 264  
E-mail: [rotterdam@sperre.com](mailto:rotterdam@sperre.com)

**Sperre Asia PTE LTD**  
Tel +65 763 63 00  
Fax +65 763 18 11  
E-mail: [asia@sperre.com](mailto:asia@sperre.com)

**Sole suppliers of  
genuine spare parts**