



| | | | |
|------|------------------------|---|-----------------------|
| ⊙ LT | OIL LEVEL TRANSDUCER | | |
| ⊙ TT | TEMPERATURE TRANSDUCER | ⊗ | CLOSING VALVE |
| ⊙ PT | PRESSURE TRANSDUCER | ⊗ | NON-RETURN VALVE |
| ⊞ | FILTER, SUCTION | ⊗ | SOLENOID VALVE |
| | | ⊗ | FLEX.HOSE W/FLANGE |
| | | ⊗ | OIL & WATER SEPARATOR |
| | | Y | FUNNEL |

Note! This diagram is strictly for guidance only.

| | | | | | |
|----|---|--------|-----------------------------|----------|--|
| 21 | 1 | Yard | Air receiver | | |
| 20 | 1 | Sperre | Plug & Go connection | | |
| 19 | 1 | Sperre | H.P. Cooler | | |
| 18 | 1 | Sperre | L.P. Cooler | | |
| 17 | 1 | Sperre | Flexible hose, air outlet | 1 BSP | |
| 16 | 1 | Sperre | Flexible hose, drain | 1/2" BSP | |
| 15 | 1 | Yard | To drain | | |
| 14 | 1 | Yard | Pressure gauge | 0-60 bar | |
| 13 | 1 | Yard | Stop valve | DN25 | |
| 12 | 2 | Yard | Stop valve | 1/2" BSP | |
| 11 | 1 | Yard | Air delivery pipe | 25 mm | |
| 10 | 1 | Sperre | Suction filter | | |
| 9 | 1 | Sperre | Pressure transducer | 1/2" BSP | |
| 8 | 1 | Sperre | Temperature transducer | | |
| 7 | 1 | Sperre | Oil level transducer/switch | | |
| 6 | 1 | Sperre | Pressure transducer, H.P. | | |
| 5 | 1 | Sperre | Pressure transducer, L.P. | | |
| 4 | 1 | Sperre | Non-return valve | | |
| 3 | 1 | Sperre | Solenoid drain valve, H.P. | | |
| 2 | 1 | Sperre | Oil & water separator | | |
| 1 | 1 | Sperre | Air compressor | | |

| Pos. | Qty | Supplier | Description | Remarks | | | | | | | | | | | | | | | | | |
|---|----------|----------|---------------------------|---|-------------|--------|---------|-----------|---|---------|---|----|------------|-------|----------|-----|--|----------|--|--|--|
| <table border="1"> <tr> <td>Cad system:</td> <td>Scale:</td> <td>Format:</td> <td>Rev.index</td> <td rowspan="4"> Installation Diagram Air-Cooled Air Compressor IXA060-090 Working pressure 0-40 Bar </td> </tr> <tr> <td>AutoCad</td> <td>-</td> <td>A3</td> <td>No. 1 Date</td> </tr> <tr> <td>Drawn</td> <td>14.10.09</td> <td>FHJ</td> <td></td> </tr> <tr> <td>Approved</td> <td></td> <td></td> <td></td> </tr> </table> | | | | | Cad system: | Scale: | Format: | Rev.index | Installation Diagram Air-Cooled Air Compressor IXA060-090 Working pressure 0-40 Bar | AutoCad | - | A3 | No. 1 Date | Drawn | 14.10.09 | FHJ | | Approved | | | |
| Cad system: | Scale: | Format: | Rev.index | Installation Diagram Air-Cooled Air Compressor IXA060-090 Working pressure 0-40 Bar | | | | | | | | | | | | | | | | | |
| AutoCad | - | A3 | No. 1 Date | | | | | | | | | | | | | | | | | | |
| Drawn | 14.10.09 | FHJ | | | | | | | | | | | | | | | | | | | |
| Approved | | | | | | | | | | | | | | | | | | | | | |
| Sperre Industri AS N-6057 Ellingsøy, Norway | | | Former dwg.: New dwg.: | Drawing no. IXA060-090 | | | | | | | | | | | | | | | | | |
| | | | | Revision I | | | | | | | | | | | | | | | | | |

This drawing is the property of Sperre Industri AS
 and can not be reproduced, copied or
 otherwise used, without our written consent.