

Datasheet

X-starter



Part no. 65416



Manufacturer & Type

Manufacturer	Sperre Industri AS
Model	Starter A5,5-8/9 E 380-480/230 K
Type	XSSA42E-5,5-8/9
Compressor	X-range Air-cooled

Supply

Main Volts/Cycles/Phases	380-480 VAC / 50-60Hz / 3-phase
Control Voltage Outputs	230 VAC / 50-60Hz
Control Voltage Inputs	24 VDC
Thermal relay range, In	5,5-8 A
Contactur type	9A
Max rating of associated main fuses	20 A
Associated control fuses F4-F5	5x25mm, 1,0A quick acting
Associated control fuses F6-F7	5x25mm, 0,4A-2,5A med. slow acting
Main supply cableglad size	M20, 6-12mm

Technical Data

Size of enclosure	500 x 300 x 200 mm
Enclosure rating	IP 65
Enclosure painting	RAL 9006
Weight	16 Kg

Digital Inputs

1. Local emergency stop
2. External emergency stop
3. Thermal overload relay
4. Remote start / stop
5. Remote load / unload
6. No function
7. Oil level shutdown
8. PTC thermistors el-motor

Digital Outputs

1. Signal to contactor
2. Drain valve solenoid
3. Function selectable
4. Remote mode signal
5. Remote alarm / service alarm
6. Remote com. Shutdown

Output 3 selection

1. Alarm
2. Shutdown
3. Group Fault
4. Alarm / Service alarm
5. Service Alarm
6. Heater (default)
7. Standby
8. Running
9. Loaded
10. Started

Analogue Inputs 4-20mA

1. Delivery pressure transducer
2. Compressor high pressure transducer
3. Compressor low pressure transducer

Analogue Output 4-20mA

1. Function selectable

Analogue Output selection

0. Delivery pressure
1. Delivery temperature
2. High pressure compr.
3. Motor current (A)

Analogue Inputs expansion module

4. Delivery temperature transducer
5. Compressor oil-level transducer
6. No function
7. Compressor motor current transducer

Communications

2 RS485 ports

Ports

Port 1 Modbus communication
Port 2 PMS between compressors

Extraordinary Functions

Automatic service cycle function
Service log
Error log with the 30 last fault codes
Pressure Management System
Power Failure Auto Restart
Multi language

General Operations

1. Semi Automatic Mode
2. Fully Automatic Mode
3. Test Mode Safety Valve
4. Test Mode Drain & Leak

Led Indicators

1. Status running (green)
2. Faults (red)
3. Service (yellow)

Sperre Industri AS
Tel +47 70 16 11 00
Fax +47 70 16 11 10
E-mail:industri@sperre.com

Sperre Rotterdam BV
Tel +31 180 463 299
Fax +31 180 463 264
E-mail:rotterdam@sperre.com

Sperre Asia PTE LTD
Tel +65 763 63 00
Fax +65 763 18 11
E-mail:asia@sperre.com

Sperre China
Tel +86 21 65070436
Fax +86 21 65070402
E-mail:china@sperre.com

Sole suppliers of genuine spare parts - www.sperre.com