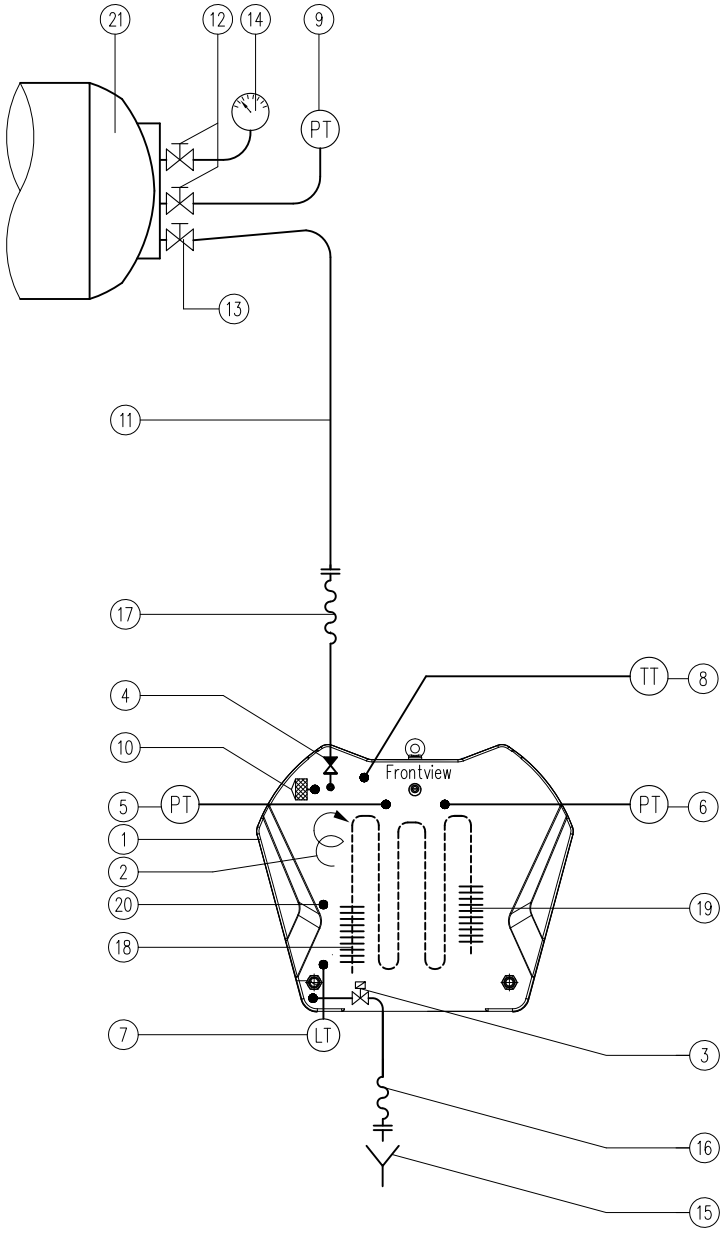

LT OIL LEVEL TRANSDUCER		
TT TEMPERATURE TRANSDUCER	CLOSING VALVE	FLEX.HOSE W/FLANGE
PT PRESSURE TRANSDUCER	NON-RETURN VALVE	OIL & WATER SEPARATOR
FILTER, SUCTION	SOLENOID VALVE	FUNNEL

Note! This diagram is strictly for guidance only.

Pos.	Qty	Supplier	Description	Remarks	
21	1	Yard	Air receiver		
20	1	Sperre	Plug & Go connection		
19	1	Sperre	H.P. Cooler		
18	1	Sperre	L.P. Cooler		
17	1	Sperre	Flexible hose, air outlet	1 1/4" BSP	
16	1	Sperre	Flexible hose, drain	3/4" BSP	
15	1	Yard	To drain		
14	1	Yard	Pressure gauge	0-60 bar	
13	1	Yard	Stop valve	DN32	
12	2	Yard	Stop valve	1/2" BSP	
11	1	Yard	Air delivery pipe	29 mm	
10	1	Sperre	Suction filter		
9	1	Sperre	Pressure transducer	1/2" BSP	
8	1	Sperre	Temperature transducer		
7	1	Sperre	Oil level transducer/switch		
6	1	Sperre	Pressure transducer, H.P.		
5	1	Sperre	Pressure transducer, L.P.		
4	1	Sperre	Non-return valve		
3	1	Sperre	Solenoid drain valve, H.P.		
2	1	Sperre	Oil & water separator		
1	1	Sperre	Air compressor		

Cad system: AutoCad	Scale: –	Format: A3	Rev.index No. | Date
Drawn	14.10.09	FHJ	
Approved			

SPERRE
Sperre Industri AS
N-6057 Ellingsøy, Norway

Installation Diagram
Air-Cooled Air Compressor
IXA200-300
Working pressure 0-40 Bar

Former dwg.:
New dwg.:
Drawing no. IXA200-300
Revision

This drawing is the property of Sperre Industri AS and can not be made public, copied or otherwise used, without our written consent.